



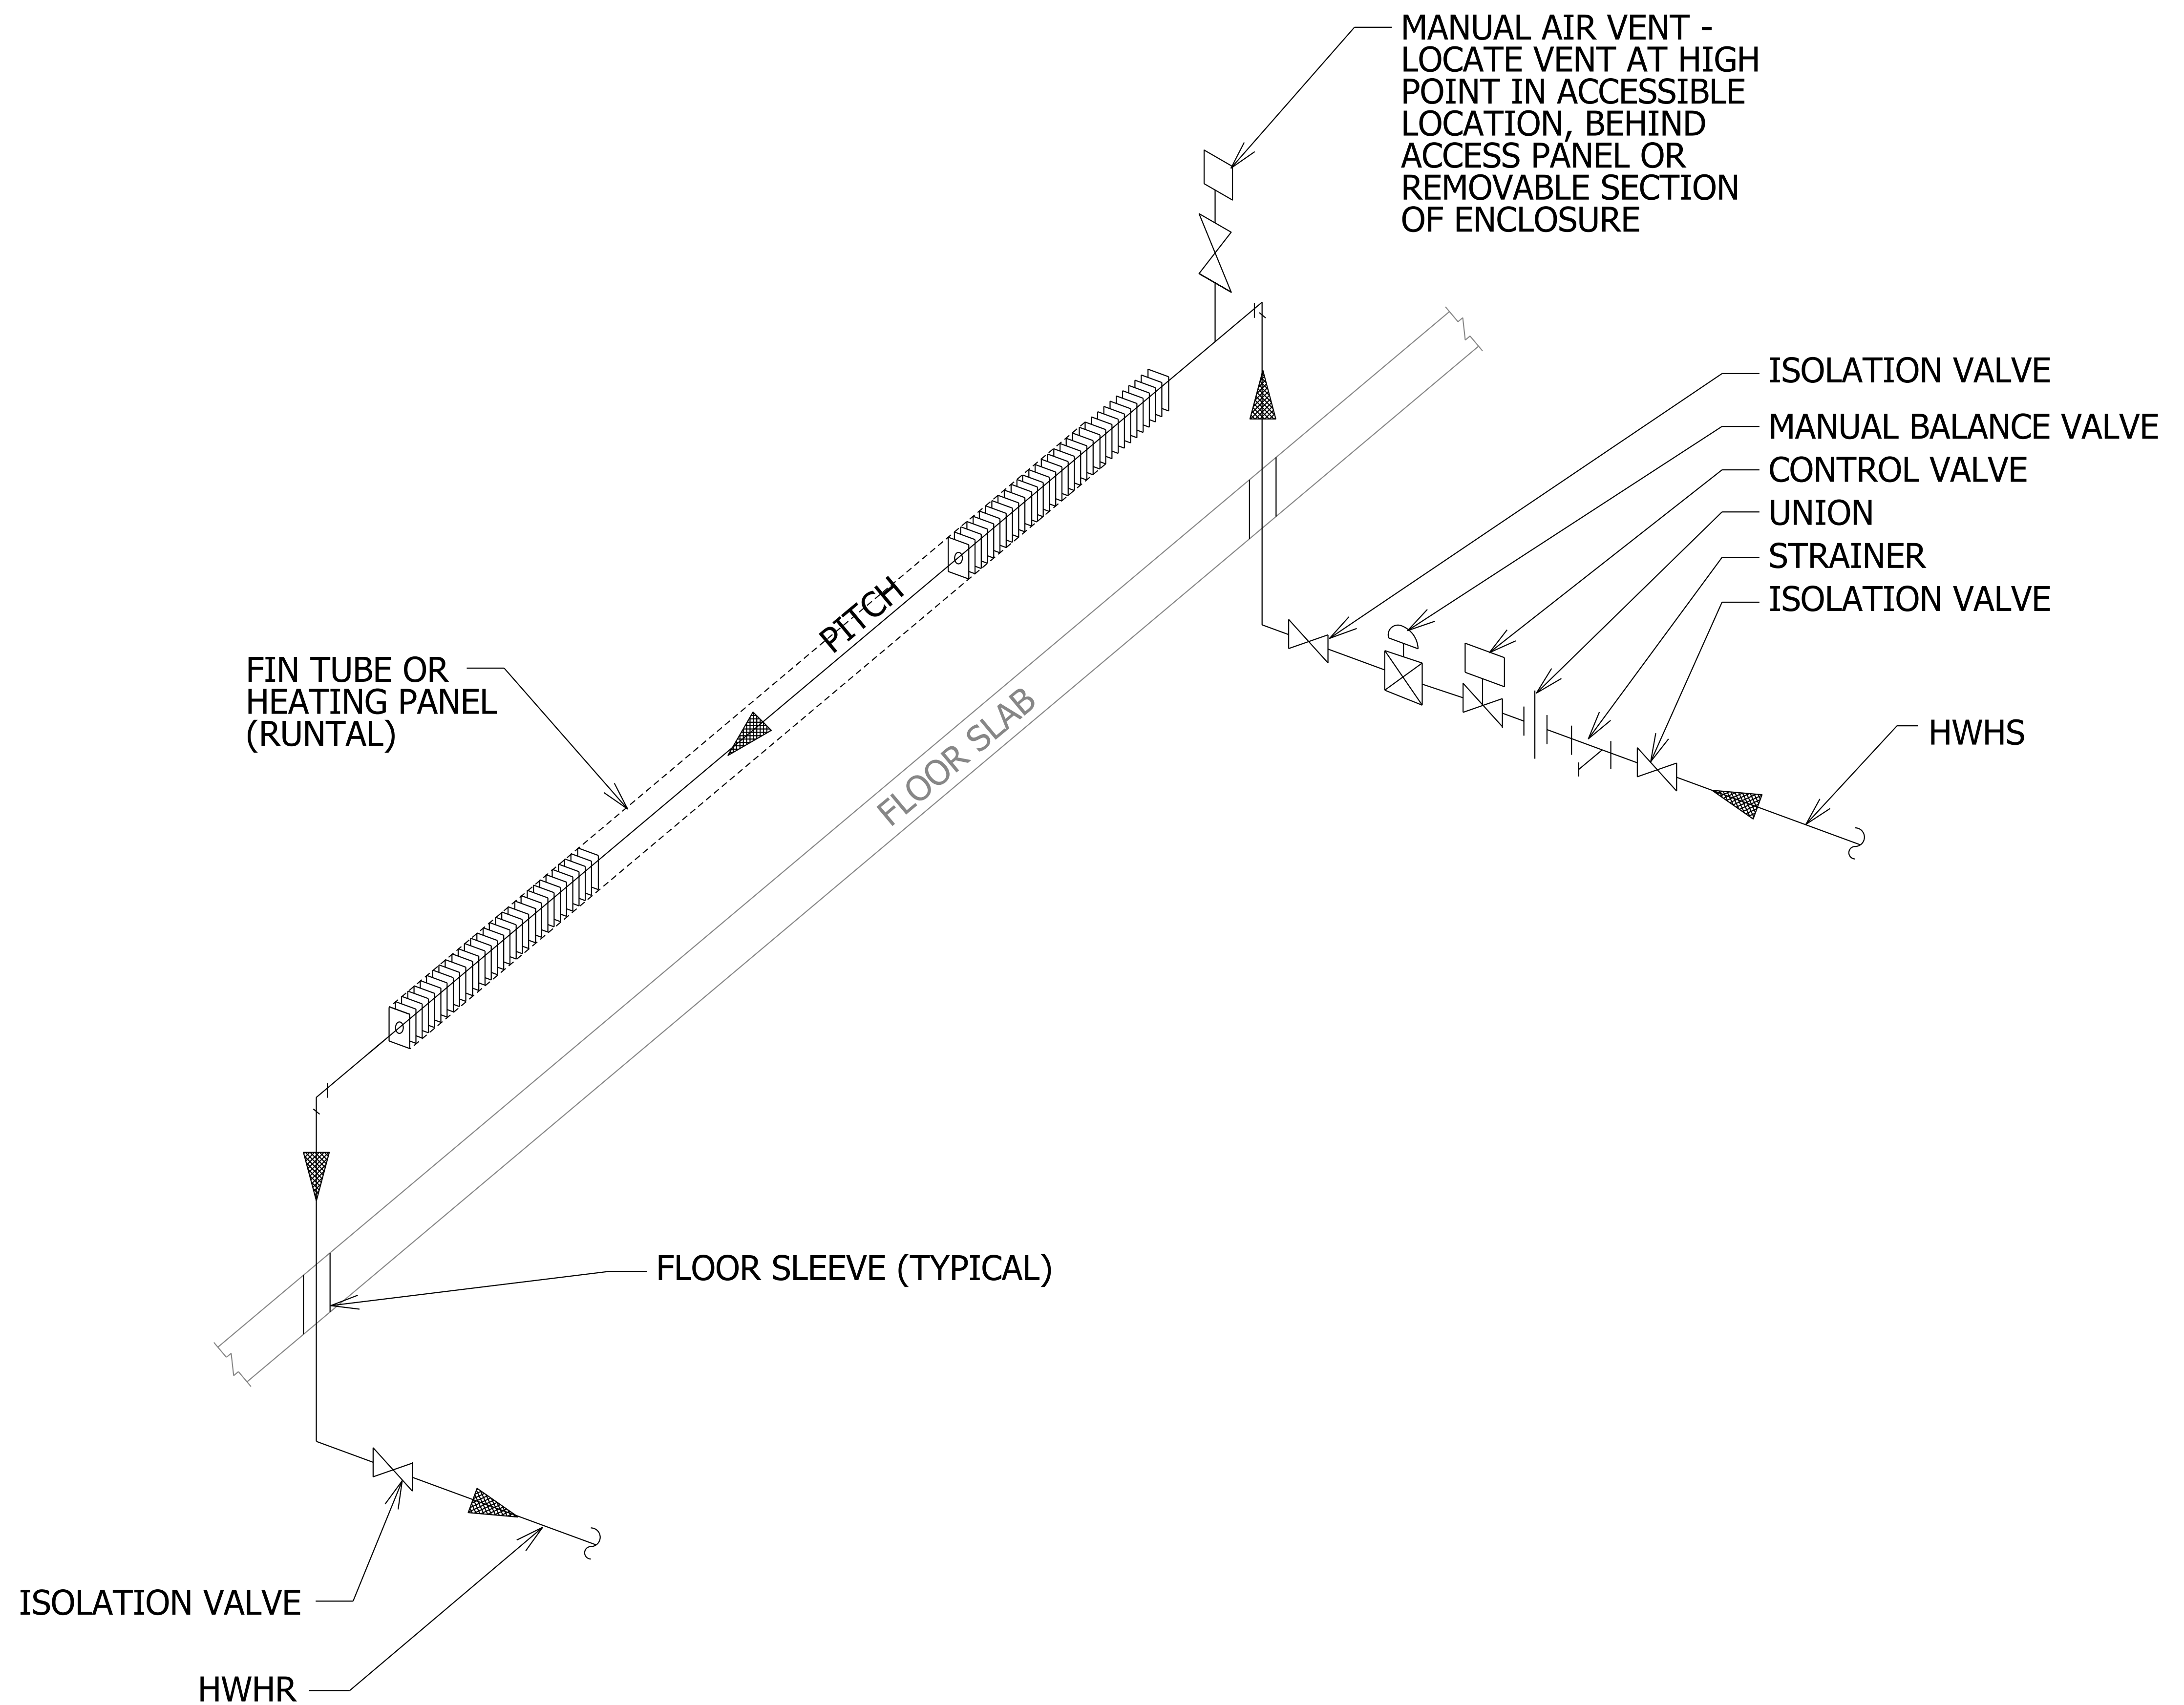

ISOLATION VALVE
HWHR

NOTES:

- PROVIDE THREADED ADAPTERS AND REDUCERS AS NEEDED TO MAKE CONNECTIONS.
- LOCATE STRAINER, CONTROL VALVE AND BALANCE VALVE IN ACCESSIBLE LOCATION AS CLOSE AS POSSIBLE TO FIN TUBE/HEATING PANEL SECTION SERVED.
- COORDINATE FIN TUBE PIPING WITH FIN TUBE ENCLOSURE.

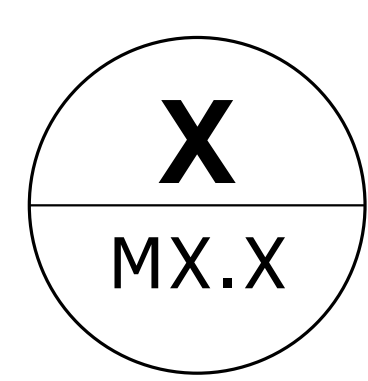

UP-FEED HOT WATER FIN-TUBE/HEATING PANEL (RUNTAL) PIPING DETAIL

NO SCALE

MD 233660 008 10 28 20.dgn