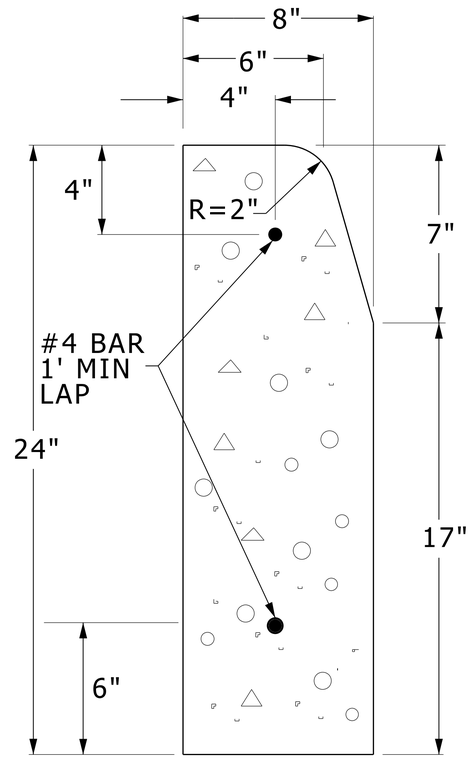

NOTES:
1) AT 90° ANGLE POINTS IN THE CURB LINE, PLACE EXPANSION JOINTS IN THE "LONG LEG" - 18" FROM THE BACK-OF-CURB OF THE "SHORT LEG."
2) DOWEL CURB PATCHES TO ADJACENT CURB
3) PLACE CONTROL JOINTS EVERY 10 FEET

STRAIGHT CURB

NO SCALE